

IBOOST
MP4 PLAYER
Features Guide

Reproductor MP4
Guía
De Características

ENGLISH

- **Battery Level**

The player shows battery capacity in 9 levels.

Battery is full on 3.8V. As power drains, capacity level will diminish.

Battery is almost out. You should charge your battery at this time.

⚡ Please switch on the player before charging. The player cannot be charged when the power switch is turned off.

⚡ Please the power off when not using the player.

Basic Functions

- **Access Menus**

Press **Menu** to access menus.

- **Scrolling**

- Scroll music, menus

- Fast Forward / Reverse when playing music.

- **List of Menus**

Access different menu functions from main menu.

Music menu:



Movie Menu:



FM Menu



E-book Menu:



Photo Menu:



Record Menu:



Settings:



USB



- **Volume Adjust**

Push **VOL** to access volume adjust, then press **Next/Last** to increase or decrease volume.

- **Switch on/off**

Press and hold **Play** to switch the player on when the player is off.

Press and hold **Play** to switch the player off when the player is on.

- **Play & Pause; exit from submenu**

In music Menu, Press **Play** to play music.

When playing music, press **Play** to

□

pause; press and hold to stop playing.

- **Start / Stop recording**

In recording Menu, press Play to stop.

Key Processing

- **Key Functions Definition**

1. **Play:**Power On/Off, Play, Pause, Stop
2. **MENU:** Enter main menu or exit from current menu.
3. **Next:** Next, FF, Volume increase
4. **Last:** Previous, Rev, Volume decrease
5. **USB:** USB outlet
6. **ON/OFF:** Power switch
7. **Earphone:** Standard earphone outlet

- **Key Processing Definition**

Key processing includes 4 actions: Press, Press and Hold, Push, Hold. **If not mentioned, all actions are Press.**

1. **Press:** Press a key and release immediately;
2. **Press and Hold:** Press a key and hold it for at least 1.2s.
3. **Push:** Push a key, and release.
4. **Hold:** Certain events occur as the key is holding such as Fast Forward and Reverse.

Play music

- **Simple actions**

41. Put earphone plug into

- earphone outlet;
- 2. Press and hold **Play** to switch the player on, then enter Music Menu and press **Play** to play music.
- 3. Select a song: **Last**: Previous song; **Next**: Next song.

Volume adjust: Press **VOL** to change volume, press **Next** to increase, **Last** to decrease.

● **Equalizer Menu**

- 1. Play music
- 2. Press **Menu** to enter play submenu;
- 3. Push **Next** to choose Equalizer Menu;
- 4. Press **Menu** to enter 'Equalizer Menu' submenu.



● **Equalizer options (EQ):**

Natural	Rock	Soft	Jazz
Pop	Classial	DBB	

Push **Next** to select an EQ and press **Menu** to confirm.

● **Synchronous Lyric Display**

The player supports lyric files with *.LRC suffix, and displays it synchronously.

How to use lyric files?

Please make sure the lyrics file has the same name as the music.

For example:

Music file: My heart will go on.mp3

Lyric file: My heart will go on.lrc

How to know if lyrics are available?

If lyrics match, a symbol will be shown on the bottom-right in music Menu.

1. When matched lyrics are available;
2. Press and hold **Menu** to enter lyrics interface;
3. Lyric displays
4. Press **Menu** to return to music Menu.

Voice Recording

Please make sure the battery has enough capacity before recording.

You can save up to 99 voice recording files in each folder.

- **Recording on “Record Menu”**

1. Enter main menu:

2. Push **Next** to scroll to Record Menu

3. Push **Menu** to select Record mode.

4. Press **Play** to start recording.

↓ Voice will be recorded in current folder which is set to 'Record stop / Main folder'

↓ If screen displays “Memory full”, it means there is not enough space to save new recorded files.

6. Delete other files to

release memory space.

⚡ If “Folder full” shows, it means there are 99 record files in this folder. Please choose another folder.

⚡ The player only responds to **Play** and **A-B** when record processing

● **Select Record Type**

1. Stop recording
2. Press **Menu** to enter record submenu
3. Push next to scroll into ‘Record type’ submenu then presses **Menu** to select it.

Fine record	wav file, fine quality
Long-time record	act file, normal quality
Fine voice control	wav file, (Recording controlled by voice, pause when mute)
Long-time voice control	act file, (Recording controlled by voice, pause when mute)

4. Press **Next** to choose appropriate type and press **Menu** to select it
5. Press **Play** to start recording.

Play recorded files

1. Enter main menu
2. Push **Next** to choose ‘Voice Menu’
3. Push **Menu** to enter playing interface
74. Press **Play**
□

again to play the file.

5. Choose recorded files.
Last: Select previous file;
Next: Select the next file;

Convert ACT Files into WAV format

The ACT file produced by this player can be converted into WAV format by using the software provided.

1. Run "Sound Converter" program. Click "OPEN" button
2. Select the ACT files you would like to convert
3. Click 'CONVERT' button, and the program will start converting

PS: This tool can also play WAV and MP3 files.

Using FM radio

1. Enter main menu;



2. Push **Next** to scroll to "FM Menu"
3. Push **Menu** to enter
4. Auto tuning
Hold **Last/Next** 2 seconds to start the channel search in 100 KHz interval upwards or downwards.
 To stop tuning,

push **Last/Next**.

5. Manual tuning

Push **Last**: Downward 100 KHz

Push **Next**: Upward 100 KH

6. Save current channel:

Push **Menu** to enter FM submenu

Press **Menu** again to save channel.

7. Listening to a saved channel:

You can press **Play** to choose a saved channel.

8. Volume control

VOL+: Increase volume;

VOL-: Decrease volume

Settings

- **Enter Settings**

You can set system performances here; options may vary in different firmware versions

1. Enter main menu

2. Push **Next** to scroll into "Settings"

3. Press **Menu** to enter.

- **Options introduction:**

● (Recording Time)	Set date and time when saving recorded file
● (Screensaver)	Set the screensaver for play / stop status
● (Display Settings)	Set screen brightness
● (Language)	Choose different languages
● (Timing switch off)	Set a count down time in minutes; the player will shut off when the time runs out.
● (Repeat Setting)	Set repeat status
● PC Menu	Options for 'Secret Space'
● (Memory Status)	Check memory space and usage status
● (Firmware Version)	Version of player's firmware
● (Firmware Upgrade)	Use to upgrade firmware
● (Exit)	Exit from Setting interface

● **List of menus:**

- 'Recording time' Setting
 1. Enter Setting menu
 2. Press **Menu** to enter 'Recording time' interface. Recording time:
 3. Push VOL+ to set years. The current parameter being set will flash.
 4. Push

Next/Last to increase/decrease value.

- “Screensaver” Setting
 1. Press **Menu** to enter screensaver setting;
 2. Push **Next/Last** to choose.
 3. After setting, press **Menu** to exit.
- Language Setting
 1. Press **Menu** to enter language setting;
 2. Push **Next/Last** to choose.
 3. After setting, press **Menu** to exit.
- Turning off Setting

Please note:

You can set time in seconds in ‘Battery saving’ Menu, allowing the player to shut down automatically when player stops and becomes idle for the period you have set. This function is void if the time is set to 0.

You can set time in minutes in ‘Sleep Menu’, allowing the player to shut down automatically when the player becomes idle (regardless of current status) for the period you have set. It is designed for use before sleep. Please note: Sleep Menu is valid only once after setting, you have to set it again if you want to use it next time.

- ‘Repeat Settings’

Please view ‘Sound Setting’

Note: in “Manual Menu” you should set repeat point manually.

In “Automatic Menu” the player can identify sentences automatically when

- on A-B repeat. (This function is designed for repeating sentences in language studies.)
- 'PC connection' Setting
Please view 'Sound Setting'
Some operation systems (Windows 2K SP4 or prior) may not recognize a USB disk with two symbols. Therefore, you have to choose an active disk here when using 'Secret Space' function. Only the active disk can be found in your PC.
 - 'Memory status'
You can check total memory space and the percentage of usage.
 - 'Firmware version'
You can find the player's firmware version.
 - 'Firmware upgrade'
Use to upgrade player's firmware.
⚡ Tips: Press Play to exit current menu quickly. The function is valid on all other menus.

Reading Documents

1. In main menu, press **Next/Last** to choose e-Document,
2. Press **Menu** to enter corresponding submenu:
3. Press **Next** or **Last** to choose the document you want to read, then press **Play** to read it.

Note: If you are set
1 in 'Manual play'
2
-

you must scroll text via Next or Last; text can be scrolled automatically under 'Auto play' set.

Browsing Pictures

This function is only available for JPEG format.

1. In main menu, press **Next/Last** to choose Photo menu.
2. Press **Menu** to enter corresponding submenu:
3. Press **Next** or **Last** to choose the document you want to read, then press **Play** to play it..

Using USB Disk




The player is also a standard USB disk. Supported by Windows98 (drivers needed), Windows 2K or above (no need for drivers), Mac OS 10.3, Red hat Linux 8.0 or above.

The player supports USB power supply, and can be used without battery when connected to PC. To enter, when in 'waiting Menu' press **Menu** to return to main menu and choose the operation you need.

This player supports Suspend Menu.

When connected to PC, The player shows one of three Menus below:

1
3
-

1. Waiting 	2. Downloading 	3. Uploading 
---	---	---

Upgrade your player

You can use Pc software to maintain or upgrade player's firmware.

1. Enter main menu
2. Push **Next** to scroll into 'Settings'
3. Push **Menu** to enter 'Settings' submenu.
4. Push **next** to scroll into 'Firmware upgrade' and push **Menu** to enter.
5. Connect player to PC
6. Run upgrade tools *MP3 Player Update*, then click 'Choose new firmware';
7. Select a firmware file. (Can be downloaded from Internet)
8. Click 'Start Upgrade', the upgrade will process.
9. When upgrade is successful, the player will display :



✦ Firmware upgrade is to improve player's performance; you can still use it normally without the upgrade process




✦ Player may not work if processed incorrectly! Please read this manual

carefully before doing upgrade process.
 ⚠ The upgrade software is not compatible with other player and vice versa.

Other settings

● **Choose other folders (Stop submenu)**

You can classify files into several different folders to easily manage them (folders should be created on PC). The player can identify 9 folders in root

<p>1. When stopped</p> 	<p>2. Press Menu to enter Stop submenu</p> 
<p>3. Press Menu to enter folder choosing interface</p> 	<p>4. Press Next or Last to choose a folder</p>
<p>5. Press Menu to enter the selected folder</p>	

Please note: You can set folders independently in Music / Recorder / Play Menu

● **Delete file (Stop submenu)**

1 Delete
 5 corresponding
 -

files/channels in Music/Play/FM Menus.

1. When Stopped. (No stop interface in FM Menu)	2. Press Menu to enter Stop submenu
3. Press Next or Last to choose 'Delete file' or 'Delete all'	4. Press Menu to enter delete interface.
5. Press Menu to confirm delete	

'Delete all' will delete all files in current folder of current Menu. For example, choosing 'Delete all' in Music Menu will delete all music files; recorded files will not be affected.

On FM Menu, all saved channels will be removed.






⚠ Please safely remove player and unplug USB cable after deleting files on PC, otherwise some files will not be removed.

● **Play Menu (Play submenu)**


You can choose different play

Menus (i.e. repeat, shuffle) when playing music or recorded files.
The first option in Play submenu is 'Play Menu'


○ **REPEAT**

 (Normal)	Playing music files in sequence until the end of folder
 (Repeat One)	Repeat single music file
 (Folder)	Play all music files in folder
 (Repeat Folder)	Repeat all music files in folder
 (Repeat All)	Repeat all music files

○ **SHUFFLE**

 (Random)	Play music files in folder randomly
--	-------------------------------------

○ **INTRO**

 (Intro)	Play the beginning 10s of each music file in sequence
---	---

● **Play speed (Play submenu)**

You can choose different play speeds and not affect the sound. (Only valid for MP3 files)




1. While playing music
2. Push **Menu** to enter play submenu
3. Push **Next** to
1 scroll to 'Play
7
-

- speed' option
- 4. Push **Menu** to enter
- 5. Push **Next/Last** to increase/decrease speed

Note: Play speed will be applied to all music files


- **Repeat Menu (Play submenu)**

- **A-B Repeat**

1. When playing music or recorded files
2. Push **Menu** to enter play submenu
3. Push **Next** to scroll into 'Repeat Menu' option
4. Push **Menu** to enter
Repeat Menu: 'A' Symbol  flashes, waiting for starting point A
5. Push **Next** to select 'A'
'B' symbol  flashes, waiting ending point B
6. Push **Next** to select B
Symbol  is fixed and player will start repeating from A-B, while playing, you can push **Last** to reset A point.

⏮ In repeat Menu, you can press **VOL+** or **VOL-** to adjust playing speed

- **Karaoke Menu (No such Function in Playing Menu)**

1. A-B repeating 	2. Push Next to enter Karaoke Menu
3. Repeat symbol 'A-B' will be replaced by karaoke symbol 'KAR'. Player begins recording voice at the length of the A-B repeat period.	4. When time reaches, player resumes playing music file and the symbol is replaced by 'KAR', push Next to enter contrast function.

Contrast Function (No such Function in playing Menu)

1. While in contrast function, repeat symbol is displayed as 'A-B', the original sound will be played.	2. While original file is finished, repeat symbol will be replaced by 'KAR', player will play the recorded voice.
--	---

↓ Push **Last** to return to 'Karaoke Menu'

↓ Press **Menu** to exit repeat Menu.

● **Repeat times (Play submenu)**

Please view 'Backlight time setting'
Repeat time determines the number of times to play A-b repeat before exiting.

● **Repeat interval (Play submenu)**

1)
9)
-

Please view 'Backlight time setting'
Repeat interval determines the time period between previous repeat (in seconds).

● **Recommended Function!**

↓ **About Secret Space**

Some MP3 users may worry about divulging secrets. They do not want others to find private information contained, therefore the data has to be removed before lending their own MP3 to others.

However, this problem is totally solved with the new 'Secret Space' function!

You can use provided software to divide the whole USB disk into two parts, and encrypt one of them. You can move your private files into the encrypted part, which will be protected by password.

To activate 'Secret Space':

1. Connect your player to PC
2. Run *MP3 Player Disk Tool*
3. Click 'Allocation and Encrypt' card, Allocate appropriate space and set username and password, and then click Start.
4. Wait for space allocation to end.
5. Click 'OK' to restart.
6. After restarting you will find two disks (only one disk can be seen on Windows 2K SP4 or prior), click the encrypted disk (the second one),
you will find
2 three files, two
0 are hidden,
-

- one is executable
7. Run executable file 'RdiskDecrypt.exe' and input username and password. If all procedures are correct, disk will be opened, and files can be copied into the disk.
 8. You must enter username and password each time to access encrypted disk.

⚠ Warning: Dividing one disk into parts will remove all data, and so will the combining process.

⚠ Warning: Please remember username and password. If you forget it, you can only use the combining process and you will lose all encrypted data.

Technical Specifications

Connecting to PC	High Speed USB	
Power Supply	Max 5-8 hours play Menu	
Voice Recorder	Sample rate	8KHz
	Format	WAV (32K bps), ACT (8K bps)
	Time	35hours (ACT, 128M Flash)
MP3、WM A、WMV、ASF	Max. Output	(L) 10mW + (R)10mW (320hm)

2

1

□

	MP3 Bit rate	8K bps – 320K bps
	WMA, WMV, ASF Bit rate	5K bps – 384K bps
	Freq. Response	20Hz to 20KHz
FM Radio	Freq. Range	76MHz – 90MHz / 87MHz – 108MHz
	Max. Output	(L) 10mW + (R)10mW (32Ohm)
	SNR	45dB
Supported Music Formats	MP1, MP2, MP3, WMA, WMV, ASF, WAV	
Operate Temperature	-5 to 40 degree	
Languages	Simp Chinese, English, Trad Chinese, Japanese, Korean, Italian, Spanish, etc.	
Supported Systems	Windows98/SE/ME/2K/XP, Mac OS 10, Linux 2.4.2	

Please note: Design and features may change without prior notice.

ESPAÑOL

2 Conoce su
2 reproductor

- **Nivel de la batería**

El reproductor demuestra 9 niveles de la capacidad.

La batería está completa en 3.8V. Con el tiempo pasa, la indicación de la capacidad hace monish.

Cuando el indicador esta en blanco, significa que la batería casi se acabó. Usted debe cargar su batería en ese momento.

⚡ Prende por favor el reproductor antes de cargar. Este aparato no puede estar cargando la batería cuando esta apagado.

⚡ Apague por favor el reproductor cuando no lo tenga en uso.

Funciones básica

- **Acceso a Menú**

Presione MENU para conseguir acceso a menú.

- **Desplazar**

- Desplazar la música, menus

- Avance rápido / Reverso cuando reproducir la música.


- **Lista de Menú**

Para conseguir acceso a los diferentes menús del menú principal

2

3

□



● **Ajuste volumen**

Presione **VOL** para ajustar el volumen, presione **Next/Last** para subir o bajar el volumen.

● **Prender/ Apagar**

Mantenga presionando **PLAY** para prender el reproductor cuando esta apagado.

Mantenga
2presionando **PLAY**
4para apagar el

reproductor cuando esta prendido.

- **Reproducir & Pausa; salir del submenu**

En menú de la música, Presione **Play** para reproducir la música.

Cuando esta reproduciendo la música, presione **Play** para pausar; manténgalo presionando para detener la reproduction.

- **Empezar / Detener la grabación**

En el menú de la grabación, presione **Play** para detener.

Proceso de las Teclas

- **Definición de las funciones teclas**

1. **Play:** Prender/ Apagar, Reproducir, Pausar, Detener
2. **MENU:** Entra el menú principal o salir del menú presente.
3. **Next:** Siguiente, FF, Subir Volumen
4. **Last:** Previo, Rev, Bajar Volumen
5. **USB:** Salida USB
6. **ON/OFF:** Prender/ Apagar
7. **Earphone:** Salida del auricular

- **Definición de los procesos teclas**

Procesos teclas incluye 4 acciones: Presione, Mantenga presionando, empuje, mantenga. **Sin menciona especial, todas acciones son de la Presione.**

Reproducir la música

- **Acciones simples**

2

5

7

1. Conecte el auricular con el aparato;
2. Mantenga presionando **Play** para prender el reproductor, luego entre menu de la Music y presione **Play** para reproducir la música.
3. Seleccione la música: **Last**: Música previa; **Next**: Siguiente música.
4. Ajuste Volumen: Presione VOL para cambiar volumen, presione Next para subir, last para bajar.

● **Menú Ecuilizador**

1. Al reproducir la música
2. Presione Menu para reproducir submenú;
3. Empuje Next para elegir Menu Ecuilizador;
4. Presione Menu para entrar el submenu de 'Equalizer Menu'.



● Detalle de cada ecualizador (EQ):

Natural	Rock	Suave	Jazz
Pop	Clásica	DBB	

- Empuje **Next** para seleccionar un EQ y presione **2** **Menu** para
- 6
-

confirmar.

- **Despliegue sincrónicamente el Lírico**

El reproductor soporta los archivos del lírico con el sufijo de LRC, y los despliegues sincrónicamente.

¿Cómo utilizar los archivos del lírico?

Asegure por favor que el lírico tiene el mismo nombre que la música

1. Cuando lírico disponible:
2. Mantenga presionando **Menú** para entrar el lírico;
3. Lírico aparece en la pantalla
4. Presione **Menú** para regresar al menú de la música.

Grabación de voz

Asegure por favor que la batería tiene suficiente capacidad antes de grabar.

Cada carpeta puede guardar hasta 99 archivos grabados con voz.

- **Grabación en “Record Menu”**

1. Entra menú principal:
2. Empuje **Next** para buscar menú de la grabación
3. Empuje **Menu** para seleccionar el modo de la grabación, y la pantalla demuestra lo siguiente:



4. Presione **Play** para empezar la grabación.

⚡ El reproductor solo responde a **Play** y **A-B** al grabar.

- **Seleccione el tipo de la grabación.**

1. Cuando en el 'Record stop'
2. Presione **Menú** para entrar el submenú de la grabación.
3. Empuje **Next** al 'Record type' submenu y luego presione **Menu** para seleccionar.

Buena Grabación	Archivo wav , buena calidad
Tiempo largo	Archivo act , calidad normal
Buen control en el voz	Archivo wav

Control del voz por tiempo largo	Archivo act
----------------------------------	-------------

4. Presione **Next** para escoger el tipo de apropiado y presione **Menu** para seleccionarlo.
5. Presione **Play** para empezar la grabación.

Reproducir archivos de la grabación

1. Entra menu principal
2. Empuje **Next** para escoger 'Play Menu'
3. Empuje **Menu** para entrar al medio de reproducir
4. Presione **Play** de Nuevo para reproducir el archive.
5. Escoge archivos de la grabación de voz.

Last: Seleccione el archive previo;

Next: Seleccione siguiente archivo;


Convierta los archivos ACT en el formato WAV

1. Activa el programa "Sound Converter". Haz clic en el botón "OPEN"
2. Seleccione el archive ACT que desea convertir.
3. Haz clic en el botón "CONVERT" y el programa va a

empezar a convertir.

Utilice el radio FM

1. Entre menu principal;



2. Empuje **Next** para "FM Menú"

3. Empuje **Menu** para entrar

4. Busca de canal automáticamente

Mantenga presionando **Last/Next** por 2 segundos para empezar la búsqueda de canal automáticamente en el intervalo de 100 khz hacia arriba o abajo.

Para detener, empuje **Last/Next**.

5. Busca el canal manualmente

Empuje **Last**: hacia abajo 100 KHz

Empuje **Next**: hacia arriba 100 KH

6. Guarda canal actual:

Empuje Menu para entrar submenu FM

Presione **Menu** de nuevo para guardar el canal.

7. Para escuchar un canal guardado:

Presione **Play** para escoger un canal guardado.

8. Control Volumen

VOL+: Subir volumen

VOL-: Bajar volumen

Programar ● Para

entrar, usted puede programar los desempeños de sistema aquí, las opciones pueden variar en diferente aversión de micro-instrucción

1. Entre menu principal
2. Empuje Next para buscar "Settings"
3. Presione Menú para entrar.

● **Instrucción de la operación:**

● (Tiempo de la grabación)	Programa la fecha y el tiempo al guardar el archivo de la grabación.
● (Screensaver)	Programa el screensaver para el estado de reproducir/ detener.
● (Programa la pantalla)	Programa el brillo de la pantalla
● (Idioma)	Escoge entre diferentes idiomas
● (Apaga automáticamente)	Programa un tiempo en minutos para que el reproductor se apague automáticamente.
● (Repite)	Programa el estado de repite
● PC Menu	Opciones para 'Secret Space'
● (Estado de memoria)	Checa espacio de la memoria
● (Version Firmware)	Version de firmware usuario
● (Aumenta Firmware)	Utilice para aumentar el firmware
● (Salir)	Salir de programar

● **Lista de menu:**

○ 'Tiempo de la grabación'

1. En la sistema de programar

2. Presione **Menu** para entrar

3. 'Recording time'

2. Empuje VOL+

1

Setting'

o "Conexión de PC"

Consulte por favor en el 'Sound Setting'

o 'Estado de memoria'

Usted puede checas el espacio de la memoria

o 'Version Firmware'

Usted puede encontrar la version Firmware del usuario.

o 'Aumenta Firmware'

Utilice para aumentar el Fireware del usuario.

● **Leer documentos**

1. En menu principal, presione **Next/Last** para escoger documentos.
2. Presione **Menu** para entrar al submenu corresponde:
3. Presione **Next** o **Last** para escoger el documento que desea leer.
4. Luego presione **Play** para leerlo.

● **Photos**

Esta function solo esta disponible para el formato JPEG.

1. En menu principal, presione **Next/Last** para buscar photos.
2. Presione **Menu** para entrar al submenu corresponde.
3. Persona **Next** o **Last** para escoger el documento

que desea leer, luego presione **Play** para reproducirlo.

Utilice Disco USB

El aparato también es un disco USB que esta soportado por Windows98 (Necesita conductores), Windows 2K o mas avanzado (no requiere conductor), Mac OS 10.3, Red hat Linux 8.0 o mas avanzado.

Este reproductor soporte USB power, se puede usar sin batería al conectar con la computadora. Para entrar, en "waiting Menú" presione **Menú** para regresar al menú principal y escoge la operación que necesita.

Al conectar a la computadora, El reproductor trabaja en los siguientes 3 menus:



Aumenta su reproductor

Usted puede utilizar el software la computadora para mantener o aumentar el micro-instrucción del usuario.

1. Entre menu principal
2. Empuje Next para
- 3.
- 5.
-




- 'Settings'
3. Empuje **Menu** para entrar al submenu de 'Settings'.
 4. Empuje **next** para 'Firmware upgrade' y empuje **Menu** para entrar.
 5. Conecte su reproductor a la computadora.
 6. Active la aumenta del reproductor MP3, haz clic en 'Choose new firmware'.
 7. Seleccione un archivo de firmware.
 8. Clic 'Start Upgrade', y empezara de aumentar.
 9. Cuando termine aumentar, el reproductor demuestra lo siguiente en la pantalla:



Otros programas


● Escoja otro doblez


Usted puede clasificar los archivos en varias carpetas diferentes para facilitar en manejarlos (carpetas deben ser creadas en computadora personal). El reproductor puede identificar 9 carpetas en la raíz.

<p>1. Cuando esta detenido</p> 	<p>2. Presione Menu para entrar al menu de STOP</p> 
<p>3. Presione Menu para entrar la carpeta</p> 	<p>4. Presione Next o Last para escoger la carpeta</p>
<p>5. Presione Menu para entrar la carpeta seleccionada.</p>	

● **Borrar archivo**

Usted puede borrar archivos/canales en cada menu de Música/Reproducir/FM.



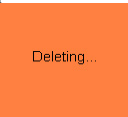

<p>1. Cuando esta detenido.</p> 	<p>2. Presione Menu para entrar al menu de STOP</p>
---	--


3.Presione Next o Last para escoger 'Borrar archivo' o 'Borrar todo'	4. Presione Menu para entrar el medio de borrar.
5.Presione Menu para confirmar/	
	

● **Manu de la reproducción**


Usted puede escoger diferente menu para reproducir
 La primera opción en Play submenu es 'Play Menu'

○ **REPITE**


 (Normal)	Reproducir archivos de la música en sucesión hasta fin de la carpeta.
 (Repite una vez)	Repite archive de la música solo una vez.
 (Carpeta)	Reproducir todas músicas en la carpeta
 (Repite la carpeta)	Repite todos archivos músicas en la carpeta.

 (Repite todo)	Repite todas músicas.
---	-----------------------

○ **BARAJADA**

 (Al azar)	Reproducir archivos de música en la carpeta al azar.
---	--

○ **Introducción**

 (Introducción)	Reproducir el 10s de cada archivo de la música en la sucesión.
--	--

● **La velocidad de la reproducción**

Usted puede escoger diferente velocidad de la reproducción y no afecta el sonido.




1. Al reproducir la música
2. Empuje **Menu** para entrar submenu de reproducir.
3. Empuje **Next** para la opción de 'Play speed'
4. Empuje **Menu** para entrar
5. Empuje **Next** para adelantar la velocidad, **Last** para bajar la velocidad.

● **Manu de Repite**





Presione **-B** para entrar o entre desde submenu de la reproducción:

○ **A-B Repite**

1. Al reproducir la música o al grabar.
 2. Empuje **Menu**
 - 3 para entrar play
 - 9
 -



- submenu
- 3. Empuje **Next** para la opción de 'Repeat Menu'
- 4. Empuje **Menu** para entrar al menu de Repite: 'A'  de Símbolo destellos, esperando el principio A
- 5. Empuje **Next** para selecciona 'A' 'B'  de Símbolo destellos, esperando el principio B
- 6. Empuje Next para seleccionar B Símbolo  fijo y **empieza a repetir entre A-B, al reproducir, usted puede empujar Last para reprogramar punto A.**

o **Menu Karaoke**

<p>1. Repite A-B</p> 	<p>2. Empuje Next para entrar al menu Karaoke</p>
<p>3. Repite símbolo 'A'  será reemplazado al símbolo del karaoke' , Reproductor empieza a grabar el voz entre el periodo de repite A-B.</p>	<p>4. Al alcanzar tiempo anterior, el reproductor reasume el archivo de la música y el símbolo reemplazó a 'A' , empuje Next para entrar a la función contraste.</p>

Función Contraste

4
0
-

1. Al entrar la function contraste, repite el símbolo  , y va a reproducir el sonido original.	2. Al terminar el sonido original, repite símbolo va a cambiar a  , reproductor va a reproducir el voz grabado.
--	---

- **Tiempo de repite**
Consulte por favor en 'Backlight time setting'
- **Repita intervalo**
Consulte por favor en 'Backlight time setting'

¡Nueva Función Recomienda!

↓ Sobre el espacio secreto

Algún usuario MP3 puede preocuparse por divulgar el secreto, que no quieren otros encuentren información privada, por lo tanto estos datos tienen que ser quitados antes de prestar su propio MP3 a otros, pero este problema ha resuelto totalmente por la técnica "Espacio secreto"!

Usted puede utilizar el software proporcionado para dividir el disco USB en dos partes, y cifrar uno de ellos. Usted puede mover su intimidad en la parte cifrada; ellos serán protegidos por la contraseña.

↓ Para activar
↓ 'Espacio Secreto':
↓

1. Conecte su reproductor a la computadora
2. Activa *MP3 Player Disk Tool*.
3. Haz clic en 'Allocation and Encrypt', asigne el espacio apropiado y el nombre de usuario y la contraseña fijo, y entonces haga clic en Comienzo.
4. Después la asignación de espacio, muestra siguiente:
5. Clic 'OK' to re-iniciar.
6. Después de re-iniciar, usted encontrará dos discos (sólo un disco puede ser visto en Windows 2K SP4 o previo), hace clic el disco cifrado (el segundo), usted encontrará tres archivos, dos son escondidos, uno es ejecutable.
7. Activa el archivo *RdiskDecrypt.exe* y pone el nombre de usuario y la contraseña. Si todo esta correcto, el disco va a abrir, y los archivos pueden ser copiados.
8. Usted debe entrar el nombre de usuario y la contraseña cada vez para acceder cifró disco.

Especificaciones técnicas

Conexión a PC	USB de alta velocidad
---------------	-----------------------

4
2
-

Power Supply	Máximo 5-8 horas	
Grabación de voz	Muestra Ratio	8KHz
	Formato	WAV (32K bps), ACT (8K bps)
	Tiempo	35horas (ACT, 128M Flash)
MP3, WM A, WMV, ASF	Max. Calidad	(L) 10mW + (R)10mW (32Ohm)
	MP3 ratio	8K bps - 320K bps
	WMA, W MV, ASF ratio	5K bps - 384K bps
	Respuesta de la frecuencia	20Hz to 20KHz
FM Radio	Rango de la frecuencia	76MHz - 90MHz / 87MHz - 108MHz
	Max. Calidad	(L) 10mW + (R)10mW (32Ohm)
	SNR	45dB
SopORTE formato de Música	MP1, MP2, MP3, WMA, WMV, ASF, WAV	
Temperatura de operación	-5 to 40 degree	

4

3

-

Idiomas	Chino, Inglés, Japonés, Coreano, Italiano
Sistemas	Windows98/SE/ME/2K/XP, Mac OS 10, Linux 2.4.2

Nota por favor: El diseño y los caracteres pueden cambiar sin previo aviso.